

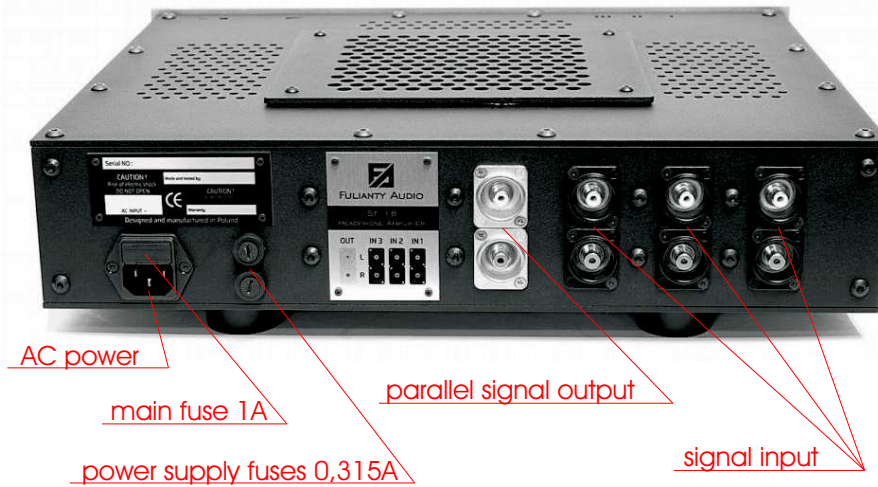


FRONT AND REAR PANEL DESCRIPTION

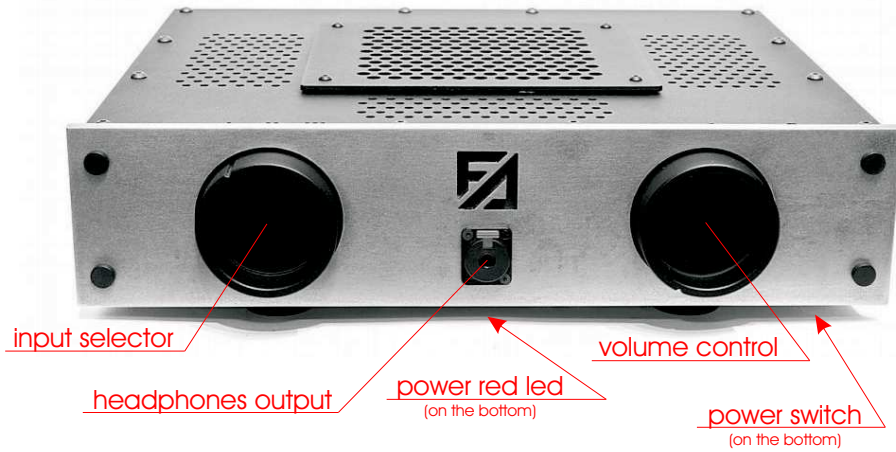

TUBES SECTION DESCRIPTION

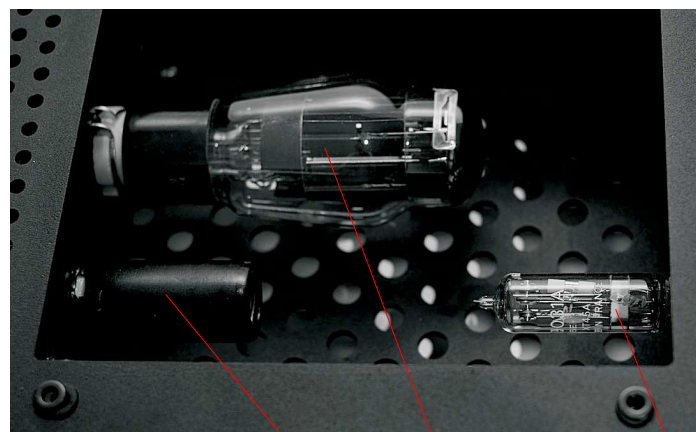

6N1P / 6N23P / ECC88 / ECC85 / 6922 / 6DJ8

6AS7G / 6080 / 5998 / 6N13S

XT45A / XT90A / F9034A



I believe you are a reasonable person, but remember!

To reduce risk of fire or electrical shock, do not expose this amplifier to rain or moisture. Do not connect the device to the power supply if it has visible signs of damage on it. Do not remove main cover. Do not block airflow. Hot surfaces and tubes. Excessive force may damage the socket and/or the pins of the vacuum tubes. Amplifier is not intended for continuous use for more than 8 hours.